


2008 Honda VT750C2/C2F Shadow Spirit 750 OWNER'S MANUAL





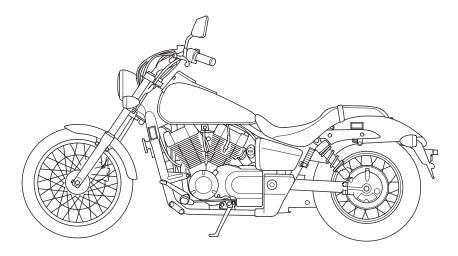

The required Maintenance Schedule that follows specifies how often you should have your motorcycle serviced, and what things need attention. It is essential to have your motorcycle serviced as scheduled to maintain safe, dependable performance and proper emission control.

The service intervals in this Maintenance Schedule are based on average riding conditions. Some items will need more frequent service if you ride in unusually wet or dusty areas or at full throttle. Consult your Honda dealer for recommendations applicable to your individual needs and use.

Some items in the Maintenance Schedule can be performed with basic mechanical skills and hand tools. Procedures for these items are provided in this manual. Other items involve more extensive procedures and may require special training, tools, and equipment. We recommend that you have your Honda dealer perform these tasks unless you have advanced mechanical skills and the required tools and equipment. Procedures for such items in this schedule are provided in an official Honda Service Manual available for purchase (page 202).





If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only Honda Genuine Parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the pre-ride inspection (page 29) and owner maintenance (page 60) at each scheduled maintenance period.

Each item on the maintenance schedule requires some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult your Honda dealer.

- Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202).
- **In the interest of safety, we recommend these items be serviced only by your Honda dealer.







Summary of Maintenance Schedule Notes & Procedures:

NOTES:

- 1. At higher odometer readings, repeat at the frequency interval established here.
- Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.
- 3. Service more frequently if the motorcycle is ridden often at full throttle or in the rain.
- Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
- 5. California type only.

Maintenance Procedures:


I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace







	FREQUENCY ODOMETER READING (Note 1)											
×			× 1,000 mi	0.6	4	8	12	16	20	24	Refer to	
ITEM NOTE		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	page		
	*	FUEL LINE					I		ı		I	_
	*	THROTTLE OPERATION					- 1		- 1		- 1	98
	*	CHOKE OPERATION					- 1		- 1		- 1	_
		AIR CLEANER	2					R			R	92
	*	SUB AIR CLEANER						R			R	_
NS MS		CRANKCASE BREATHER	3			С	С	С	С	С	С	94
ITEMS		SPARK PLUGS				- 1	R	- 1	R	- 1	R	106
	*	VALVE CLEARANCE			ı		-1		ı		I	_
RELATED		ENGINE OIL			INITIAL = 600 mi (1,000 km) or 1 month: R			78				
					REGULAR = EVERY 8,000 mi (12,800 km)							
					or 12 months: R							
EMISSION		ENGINE OIL FILTER			R		R		R		R	83
138	*	ENGINE IDLE SPEED			ı	- 1	ı	ı	ı	I	ı	104
		RADIATOR COOLANT	4				1		ı		R	88
	*	COOLING SYSTEM					- 1		ı		- 1	_
	*	SECONDARY AIR SUPPLY					1		I		- 1	_
		SYSTEM										
	*	EVAPORATIVE EMISSION	5					1			-1	_
		CONTROL SYSTEM										

^{*} Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202).





FREQUENCY			ODOMETER READING (Note 1)									
	Х			× 1,000 mi	0.6	4	8	12	16	20	24	Refer to
IT	ITEM NOTE		imes 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	page	
(0		FINAL DRIVE OIL					- 1		- 1		R	95
ITEMS		BRAKE FLUID	4			- 1	- 1	R	- 1	- 1	R	113
		BRAKE SHOE/PAD WEAR				- 1	- 1	I	- 1	- 1	- 1	115, 118
日日		BRAKE SYSTEM			- 1		- 1		- 1		- 1	112
∢	*	BRAKELIGHT SWITCH					- 1		- 1		- 1	_
교	*	HEADLIGHT AIM					- 1		- 1		- 1	_
Z		CLUTCH SYSTEM			- 1	- 1	- 1	I	- 1	- 1	- 1	100
SS		SIDE STAND					- 1		- 1		- 1	126
N	*	SUSPENSION					- 1		- 1		- 1	_
	*	NUTS, BOLTS, FASTENERS			- 1		- 1		- 1		- 1	_
NON-EMISSION	* *	WHEELS/TIRES			Ī	Ī	I	I	Ī	Ī	Ī	_
_	* *	STEERING HEAD BEARINGS			- 1		- 1		- 1		- 1	_

^{*} Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 202).



^{**}In the interest of safety, we recommend these items be serviced only by your Honda dealer.



Maintenance Record

Keeping an accurate maintenance record will help ensure that your motorcycle is properly maintained. Retain detailed receipts to verify the maintenance was performed. If the motorcycle is sold, these receipts should be transferred with the motorcycle to the new owner. Make sure whoever performs the maintenance completes this record. All scheduled maintenance, including the 600 mile (1,000 km) initial maintenance, is considered a normal owner operating cost and will be charged for by your dealer. Use the space under Notes to record anything you want to remind yourself about or mention to your dealer.

Miles (km)	Odometer	Date	Performed By:	Notes
600 (1,000)				
4,000 (6,400)				
8,000 (12,800)				
12,000 (19,200)				
16,000 (25,600)				
20.000 (32.000)				

Servicing Your Honda

65





Maintenance Record

Miles (km)	Odometer	Date	Performed By:	Notes
24,000 (38,400)				
28,000 (44,800)				
32,000 (51,200)				
36,000 (57,600)				
40,000 (64,000)				
44,000 (70,400)				
48,000 (76,800)				
52,000 (83,200)				
56,000 (89,600)				
60,000 (96,000)				
64,000 (102,400)				
68,000 (108,800)				

